

Set A Code

1. Open the battery cover.
2. Press the Set Button (S) and listen for 1 beep.
3. Enter desired code on keypad (2- 8 digits within 5 seconds), then press the unlock button on the keypad.
4. Engage lock by pressing the lock button on the keypad.
5. Test the lock by entering code then pressing the unlock button.
6. Repeat procedure 2 & 3 to enter up to 6 new user codes.

Delete Programed Code(s)

1. Press the Cancel Button (C) and listen for 1 beep.
2. To delete a single code, enter the desired code to be deleted, then press the Unlock Button on the keypad until you hear 2 confirmation beeps.
3. **To delete all codes**, press and hold the Cancel Button (C) until you hear 2 confirmation beeps.
4. To add new code or codes, see “**Set A Code**”.

Set A Remote

1. Press the Set Button (S) and listen for 1 beep, then press and hold either the lock or unlock button on the **remote control** until you hear 2 confirmation beeps.
2. Repeat above procedure to program up to 15 different remote controls.


Warranty

Lifetime Warranty on Exterior Finish • 25 Years Mechanical Warranty • 1 Year Limited Electrical Warranty

Morning Industry Inc. warrants to the original residential user of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. User must provide a copy of original purchase receipt. This warranty Does Not Cover abuse or misused products or products used in commercial applications. All mechanical components carry a limited warranty, for a period of 25 years from the date of purchase. The Finish of the exterior of this lock carries a limited warranty of the lifetime of the unit against deterioration due to normal weather conditions. This warranty does not apply to locks that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.)

This warranty is limited to repairing or replacing of this lock only at Morning Industry Inc.'s sole discretion. Morning Industry Inc. will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. To Implement this warranty, please enclose a copy of purchase receipt, day and night time telephone number, and a check or money order of \$10.00 for Shipping & Handling.

Please return the lock with the above information with S+H Charge freight prepaid to:
Morning Industry Inc. Attn: Returns Dept. 270 S. 5th Ave. La Puente, CA 91746

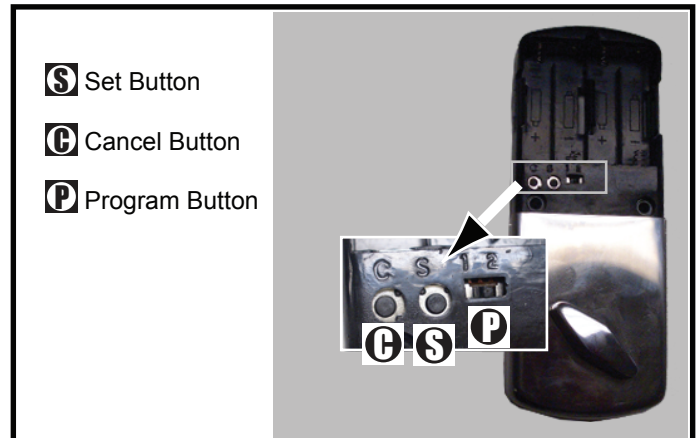

- S** Set Button
- C** Cancel Button
- P** Program Button

Delete Programed Remotes

1. Press the Cancel Button (C) and listen for 1 beep.
2. Press and hold either the lock or unlock button on the new remote control until you hear 2 confirmation beeps.

(This will erase all previously programmed remote controls leaving the new remote control as the first and only remote control programmed).

Lock function will NOT operate without any pre-programed code(s).

1. **TO LOCK:** Press Lock Button on the keypad
2. **TO UNLOCK:** Enter code then press Unlock Button on the keypad.
3. **REMOTE:** Works up to 30ft away. (without obstructions). Range decreases with obstructions.