

INSTALLATION INSTRUCTIONS

1-800-355-0157

NOTE: To view video installation instructions, visit our website at the following address: <http://www.morningindustry.com/installvideos.php>

A Back Module

B Back Module Battery Cover

C Front Assembly

D Latch Strike Plate

E Back Mounting Plate /4 screws
(2 long screws to attach Cylinder)
(2 short screws to attach Back Module)

F Remote Controller w/2 keys

G Door Latch


H Screw Driver



Step 1

Insert latch in door as shown in diagram. Make sure arrow is pointing up.

NOTE: Make sure you install new Strike Plate on door frame and cut hole appropriately. It may be necessary to enlarge existing hole.

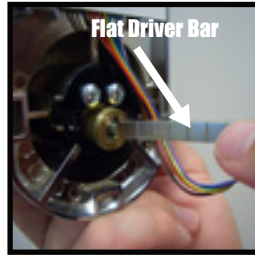

Step 2


Prepare Front Assembly for mounting as follows:

- a. insure key is removed.
- b. unlock Front Assembly by putting Flat Driver Bar in the vertical position. (see diagram)



Step 3

Mount Front Assembly on door, routing wire loom UNDER latch.

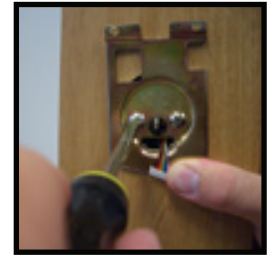


Step 4

Install Back Mounting Plate & route wire loom through bottom hole.



Step 5

Connect wire loom from Front Assembly to Back Module & remove battery cover. *See Note

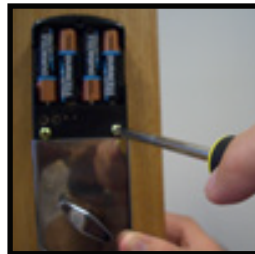

Step 6

Fasten Back Module to the Back Mounting Plate. DO NOT OVER TIGHTEN. **Install premium alkaline batteries.**



Step 7

Replace Back Module Cover.

* Latch and Back Thumb Turn should be in unlocked position. (top of Thumb Turn is pointing away from latch)